

DC2005

# DOLPHIN WALL MOUNTED WC PAN AND SEAT

---

INSTRUCTION MANUAL




May 2024


**D**  
DOLPHIN

# INSTALL DIAGRAM

## THIS PACKAGE CONTAINS

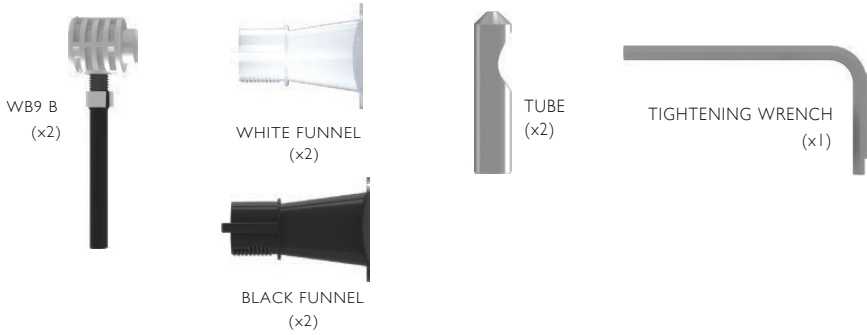


## Step 1

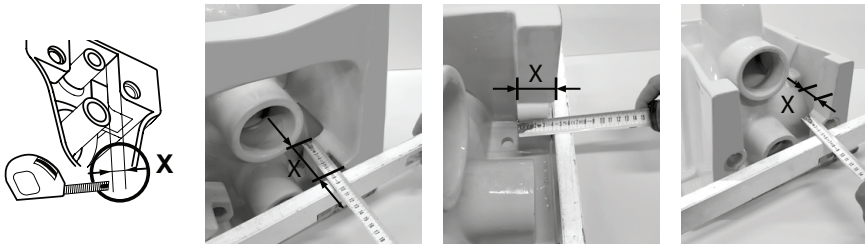


Measure the thickness of the ceramic 'X' from the support point of the WB9 B on the ceramic to the outermost point of the sanitary ware which will rest on the wall.

## Step 2



$34 \text{ mm} \leq X \leq 41 \text{ mm}$





$42 \text{ mm} \leq X \leq 47 \text{ mm}$

Choose the correct funnels based on the thickness 'X' of the ceramic: white for X between 34 and 41 mm, black for X between 42 and 47 mm.

# INSTALL DIAGRAM



## Step 3

Check that the protrusion of the M12 threaded bars from the wall is equal to the thickness of the ceramic 'X' - 8 mm.

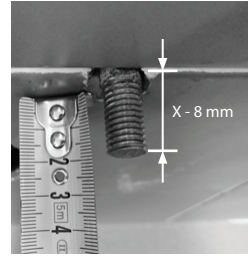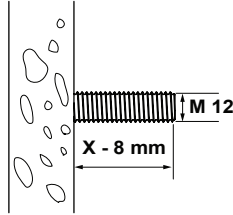



## Step 4

Screw the tube to the correct size, equal to the thickness of the ceramic 'X' - 33 mm.

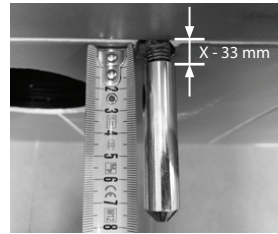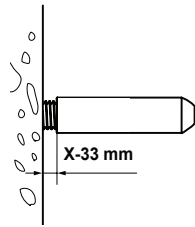

## Step 5



Orient the tube cavities downwards.

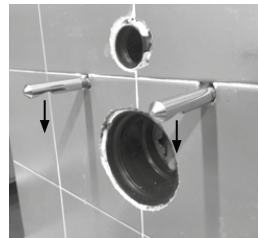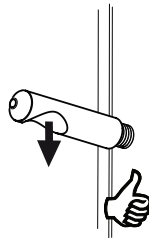

# INSTALL DIAGRAM


## Step 6

Insert the two WB9 B fixings on the ceramic and attach the funnels chosen in point 2.

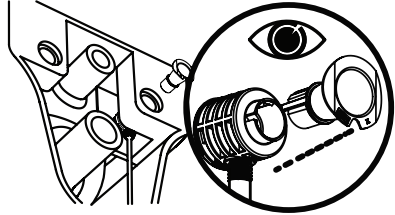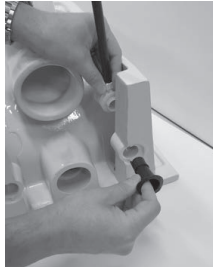


## Step 7

Rotate the fixings until the tubes are perpendicular to the floor.

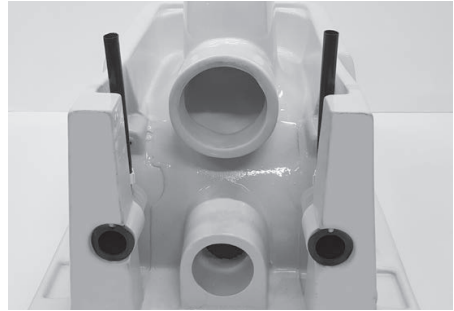

## Step 8


Insert the sanitary fixture making sure that the tubes are inside the funnels.

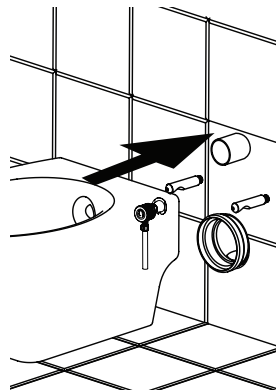

# INSTALL DIAGRAM

## Step 9


Screw the two WB9 B devices by inserting the tightening key into the two tubes. (Max 6 Nm).

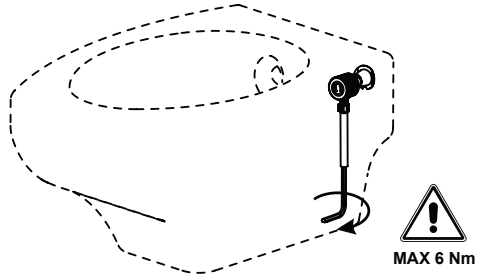

## Step 10

Once fixing is completed, if the tube protrudes from the ceramic, fold the excess part towards the inside of the sanitary ware.



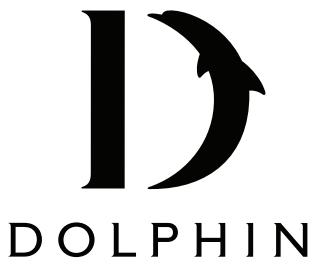

**Dolphin Solutions Ltd**

Southpoint, Compass Park, Bodiam,  
Robertsbridge, TN32 5BS

Tel: +44 (0)1424 20 22 24

Fax: +44 (0)1424 205 200

[info@dolphinsolutions.co.uk](mailto:info@dolphinsolutions.co.uk)

[www.dolphinsolutions.co.uk](http://www.dolphinsolutions.co.uk)